

Mitel Call Forwarding

1. Press the (Settings) key on the phone to enter the Settings Menu.
2. Navigate to the Call Forward setting and press the Select button or the Select softkey.
3. Enter forwarding numbers using the dialpad keys.
 - **Always:**
Immediately forwards all incoming calls to the specified number.
 - **Busy Internal:**